



madebyzen™  
— ENGLAND —

# CHROMA

Aroma Diffuser with Mood Lighting

Create a cool, scented and relaxing mist

# TABLE OF CONTENTS:

A. ABOUT THE CHROMA

B. FEATURES

C. TECHNICAL SPECIFICATION

D. OPERATING INSTRUCTIONS

E. MAINTENANCE

F. TROUBLESHOOTING

**Congratulations on purchasing the  
madebyzen™ Chroma Aroma Diffuser.  
Please keep this manual for further  
reference and maintenance.**



## ABOUT THE CHROMA

The design of the Chroma Ultrasonic Aroma Diffuser is uniquely stylish. The refraction of the mood light emanates from the top of the diffuser and gradually cascades through the colours of the spectrum. Should you wish to use the diffuser at night without the light you have an option, which will allow you to sleep peacefully while the cool mist gently surrounds you. The Chroma is beautifully presented with simple, easy to use features incorporating innovative touch button technology – yet the power consumption is remarkably low. The elegantly designed Chroma is available in black and white and sits comfortably in any home décor as well as being an ideal choice to use during aromatherapy or just adding fragrance in your home.

By placing tap water and a few drops of your favourite Fragrance or Essential oils into the diffuser, it will, with the press of a button, instantly release a heatless, completely safe, fine mist of scented vapour into the atmosphere to stimulate your senses and enable you to sink into a relaxed world of healing and self-balance. This is the believed to be the best way to diffuse any fragrance into the atmosphere, because, without direct heat, essential oils are not degraded. However, if you do not wish to use a fragrance or essential oil, you can still enjoy the health benefits of the humidifying mist which also helps to counteract the drying effects of central heating and air-conditioning.

The Chroma will automatically shut-off when the water falls below a certain level and there are no naked flames or harmful smoke, ideal for use around children or pets.

madebyzen™ is a British brand with inspired designers who are constantly refining and creating new products, which meet the highest quality standards and are globally coveted.

**Thank you for purchasing the madebyzen™ Chroma Aroma Diffuser.**



## FEATURES

**Touch Button Technology** – As soon as you power up the Chroma Aroma Diffuser, it operates through advanced touch button activation. Simply press the (ON/OFF) button.

**Aroma Diffuser** – Enjoy the ultimate aromatherapy experience from this little sleek device using your favorite Fragrance or Essential Oil. The Chroma uses advanced Ultrasonic technology which produces vibrations at high frequency turning the water and oil into a fine mist, creating a soothing and therapeutic atmosphere, without a heat source.

**Humidifier** – used with or without fragrance or essential oils, you can still enjoy the health benefits of the humidifying mist, which is ideal for counteracting some of the dryness created by today's central heating and air conditioning systems.

**Mood Lighting** – The soft color changing LED lighting creates a wonderful ambience in your living space. The LED's will softly emit a symphony of colour changing lights from the top of the diffuser to enhance your mood.

## ACCESSORIES



Adapter



Measuring cup



## TECHNICAL SPECIFICATION

Product name: **Chroma Ultrasonic Aroma Diffuser**

Model No: **EW9970B**

Input voltage: **AC:110-240V,50/60Hz DC:24V**


Water tank volume: **150ml**

Rated power: **12W**

Dimension: **138x138x162mm**

Net weight: **0.46KG**

Coverage Area: **15m<sup>2</sup> (approx.)**

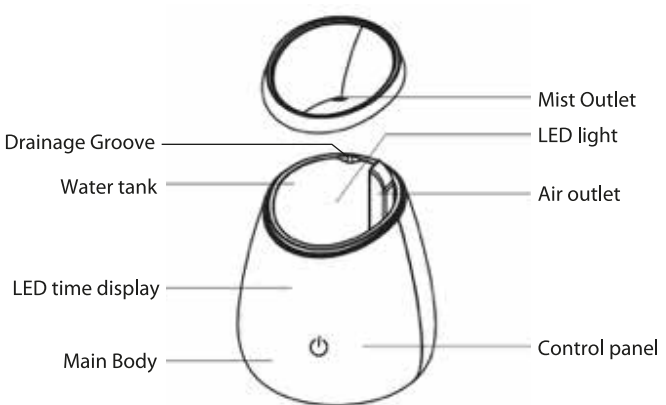

## IMPORTANT NOTES BEFORE USE:

1. Place the Aroma Diffuser on a flat surface, at least 60cm away from the floor and at least 10cm away from the wall. DO NOT place the Aroma Diffuser on wooden or polished furniture that may be damaged by water moisture.
2. Always unplug the Aroma Diffuser from the mains electrical supply when cleaning or filling with water. Always use the power adaptor supplied. Ensure the cable is secure to avoid tripping or knocking over the Aroma Diffuser. If the power adaptor is damaged, it must be replaced with a suitable adaptor provided by the manufacturer or its Agent. Alternatively, a new adaptor can be purchased from your retailer.
3. Use a suitable measuring cup to fill water into the water tank. Never attempt to fill water under a running tap or whilst plugged in. Do not fill the water beyond the MAX level mark of the Water Tank. The Aroma Diffuser will not work if filled beyond the MAX level mark. Carefully remove the excess water from the tank, if overfilled remove from the Drainage Groove – away from the Air Outlet.
4. The Aroma Diffuser must be kept out of reach from children and pets to avoid risk of injury. Children should be supervised at all times to ensure they do not play with the appliance.
5. The Aroma Diffuser is not intended for use by persons (including Children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Keep the diffuser in clear space to allow the mist to freely spread and away from appliances especially those sensitive to water to avoid unnecessary accidents.
7. The Aroma Diffuser must be kept clean and dry when not in use. Never leave stagnant oil and water in the tank for prolonged periods.
8. Never attempt to disassemble your Aroma Diffuser or repair the product, as this will void your warranty and create a shock hazard. Contact your retailer if an internal inspection is required.
9. In case of abnormal observations such as smoke, peculiar smells or noise, stop using the Aroma Diffuser immediately to avoid the risk of an accident such as fire or electric shock. Unplug the Aroma Diffuser immediately and contact the retailer from where you purchased the Aroma Diffuser. Never wrap the adaptor with cloth or paper as blocking ventilation could increase the risk of fire.
10. Always handle the Aroma Diffuser with care – accidental damage is not covered under the warranty.
11. Always use water at room temperature and use only fresh, clean water from a reliable source.
12. Always plug the adaptor into the DC Jack before plugging into the mains.



## OPERATING INSTRUCTIONS



**DO NOT** attempt to fill water into the diffuser from the top opening. Always remove the cover before filling the Water Tank.



**1. Take off the cover**

**2. Use a suitable measuring cup to add water into the water tank. DO NOT fill the water beyond the MAX level mark. The Diffuser will not work properly if water is filled beyond the MAX level.**





**3. Add 3-5 drops of your essential or fragrance oil**

**4. Replace the top cover.**



**5. Connect the power with plug. Insert the DC Jack into the Aroma Diffuser before plugging into the mains.**





## SETTINGS

<b>ON/OFF Button</b>	<b>Aroma Diffuser</b>	<b>Mood Light</b>
<b>Press Once</b>	<b>ON</b>	<b>OFF</b>
<b>Press Twice</b>	<b>ON</b>	<b>ON – the mood light will gradually change through a spectrum of colours.</b>
<b>Press Thrice</b>	<b>OFF</b>	<b>OFF</b>



## MAINTENANCE



**1. Turn the device OFF and unplug the unit from the electrical outlet. Then lift off the top cover.**

**2. Drain and rinse the water tank thoroughly to remove any sediment and dirt. Wipe clean and dry with a clean soft cloth or paper towel.**



**3. Using a soft clean cloth, thoroughly clean the inside of the Water Tank. Use a swab to clean the surface of the disc area. Always keep the Aroma Diffuser clean and dry when not in use.**



## TROUBLESHOOTING

Symptom	Possible Cause	Solution
No mist or mist volume reduced	Power supply is not connected	Plug in the adaptor and switch on the Aroma Diffuser.
	There is insufficient water in the tank.	Refill the water tank with tap water. Take care not to fill past the maximum water level line.
	Water is exceeding the max. water level line	Carefully pour out the excess water. Water must not exceed max. water level line.
	There is a build-up of oil on the ceramic disc.	Please refer to the instruction manual on how to clean the unit.
	Cover is not positioned properly	Ensure the cover is positioned properly on top of the Aroma Diffuser.

The intensity and amount of mist produced may vary, but this is not unusual and should not be considered as a fault. Factors that affect this include water type, humidity, temperature, air currents etc.



### IMPORTANT!

In accordance to WEEE Directive (Waste from Electrical and Electronic Equipment Directive) 2002/96/EC this equipment should not be disposed of in the normal waste stream.

Corrosive oils such as Citronella may cause damage to the unit if left in the reservoir. This type of damage is not covered under the warranty. This Aroma Diffuser must be cleaned after each use.